
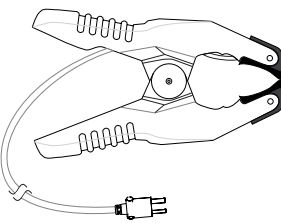


Fieldpiece

Superheat and Subcooling Meter For A/C and Refrigeration with Pipe Clamp Model: SSX34

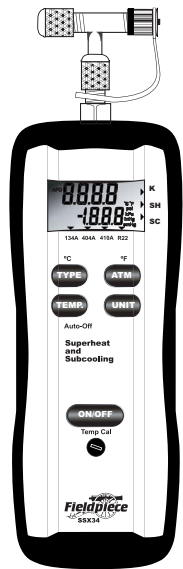

OPERATOR'S MANUAL

General

Operating environment: 32°F (0°C) to 122°F (50°C) <75% RH

Storage environment: -4°F (-20°C) to 140°F (60°F) <80% RH with battery removed from meter.

Overrange: "OL" or "-OL" is displayed.

Auto-off power: 15 minutes

Temperature coefficient: 0.05 x (specified accuracy) per °C

Accuracy: Stated accuracy at 23°C ± 5° (73°F ± 9°F), <90%R.H.

Battery: Single standard 9-volt battery, NEDA 1604, JIS 006P, IEC 6F22.

Low battery:  symbol is displayed.

Temperature

Temperature Input: Standard K-type thermocouple connectors

Measurement range: -40°F to 400°F (180°F max with supplied ATC1 pipe clamp thermocouple)

Resolution: 0.1°

System accuracy after field calibration:

- ±1.0°F @ -40°F to 200°F with field calibration
- ±0.5°C @ -40°C to 93°C with field calibration
- ±2.0°F @ 200°F to 400°F with field calibration
- ±1.0°C @ 93°C to 204°C with field calibration

Description

The SSX34 is a portable standalone superheat and subcooling meter for A/C and refrigeration. The SSX34 is designed to fit the needs of the HVACR technician with a rugged rubber boot for durability and magnetic hanger for easy use. Hang the magnetic hanger over a corner to minimize slip. Plug in the pipe clamp thermocouple into the K-Type thermocouple plug. You can connect the SSX34 directly to the A/C or refrigeration system using a standard 1/4" EPA approved refrigerant hose using the pressure port at the top of the meter. You can even use the "T" included to charge the unit while checking superheat or subcooling, making it possible to charge to superheat or subcooling. The SSX34 will display superheat or subcooling for R-22, R-410A, R-134A and R-404A.

The pipe clamp will take the temperature reading of the refrigerant piping giving the actual refrigerant temperature. The refrigerant hose will then sense the refrigerant pressure. The SSX34 then uses the actual temperature and boiling point (at the sensed pressure) to calculate and display real-time actual subcooling or superheat as well as display refrigerant temperature and pressure.



WARNINGS



Never take pressure readings exceeding 500Psi or serious injury or damage to the meter may occur.

Pressure

Pressure Input: Standard 1/4 male flare fitting

Measurement range:

29" HgV to 500PSIG (english)
74 cmHgV to 0 to 4000KPa (metric)
HgV indicates a vacuum measurement in either inches (english) or cm (metric) of mercury. A perfect vacuum would be 29.92"HgV or 76.00cmHgV. Atmospheric pressure at sea level would be 0" HgV and 0 cmHgV.

System accuracy after field calibration:

29" HgV to 0" HgV: ±0.2" HgV
74 cmHgV to 0 cmHgV: ±0.4 cmHgV
0 to 200 Psi: ±1 Psi
0 to 1378 KPa: ±7 KPa
200 to 500 Psi: ±0.3%+1 Psi
1378 to 3447KPa: ±0.3%+7 KPa

Maximum overload pressure: 800PSIG

Operation

1. Connect the thermocouple pipe clamp and refrigerant hose to the meter.
2. Calibrate if needed (see Field calibration).
3. Select °C or °F by holding down the °C or °F button while turning on the SSX34.
4. Hand tighten 1/4" flare to suction line or liquid line as close to the evaporator or condenser as possible using an EPA approved service hose (not included).
5. Select proper pressure units (english psi or metric KPa) by pressing the UNIT button.
6. Select refrigerant (R22, R410A, R134A, or R404A) by pressing the TYPE button and observing the arrow at the bottom of the LCD.
7. Connect the pipe clamp to the suction (superheat) or liquid (subcooling) line at least six inches from the compressor and slide it under the insulation for best accuracy isolating the pipe clamp from the ambient air.
8. Select temperature to display (superheat, subcooling, or refrigerant temperature). Temperature being displayed is designated by the arrows along the right side of the LCD "K" is the direct temperature from the thermocouple (actual refrigerant temperature). "SH" is superheat and "SC" is subcooling. Pressure is constantly displayed in lower right.
9. You must wait until the system you are testing has stabilized.

Unit Fluctuations Near Zero

When the pressure/vacuum is near zero, the unit shown on the display may fluctuate between vacuum and pressure. This is similar to a classical gauge face as shown. Below zero is vacuum (inHg or cmHg), above 0 is pressure (psi or kPa). There is nothing wrong if this happens. The appropriate units will be displayed when a pressure/vacuum measurement is taken.



Service

Any defective SSX34 should be returned to Fieldpiece Instruments for warranty service along with proof of purchase. Call Fieldpiece for a return material authorization (RMA). For out of warrantee service, send the SSX34 and/or the ATC1 thermocouple clamp along with a check or money order for \$125 (SSX34) and/or \$30 (ATC1) to Fieldpiece. Your SSX34 and/or ATC1 will be repaired or replaced at Fieldpiece's option.

10. Once you have the superheat or subcooling reading follow the manufacturer of the air conditioner's specifications to properly charge or diagnose the system.

Field Calibration

Temperature:

To calibrate the SSX34 temperature, adjust the pot on the front of the meter labeled "Temp-Cal". The best way to calibrate is to match to a known temperature. Ice water is very close to 32°F and is readily available. Accuracies of one degree or better are easily obtained.

1. Stabilize a large cup of ice water. Pure, distilled water will be the most accurate.
2. Using the Type button, scroll through temperature displayed until you reach the "K" spot, which is the direct temperature input from the K-type thermocouple.
3. Immerse the temp probe in ice water and let it stabilize.

Pressure:

To calibrate the SSX34 pressure, ensure that the SSX34 is disconnected from the pressure source and at equilibrium with the ambient pressure. Press the ATM button and the SSX34 will set the "zero" point of pressure to the ambient pressure.

Warranty

The product is warranted to the original purchaser against defects in material or workmanship for a period of one (1) year from the date of purchase. During the warranty period, Fieldpiece Instruments will, at its option, replace or repair the defective unit.

This warranty does not apply to defects resulting from abuse, neglect, accident, unauthorized repair, alteration, or unreasonable use of the instrument. Any implied warranty arising out of the sale of Fieldpiece's products including but not limited to implied warranties of merchantability, and fitness for purpose, are limited to the above. Fieldpiece shall not be liable for incidental or consequential damages.



Fieldpiece Instruments, Inc.
580 West Central Ave. Suite A
Brea, CA 92821
Phone: (714) 257-9060 Fax: (714) 257-9069
www.fieldpiece.com

